




The accelerator is activated when the forward speed exceeds 3 km/h

1. Speedometer:
2. Battery level: (5 bars)
3. Headlights
4. Bluetooth:
5. SPORT mode (up to 25 km/h)
6. COMFORT mode (up to 20 km/h)
7. ECO mode - (up to 6 km/h)
8. speed: press button (A) twice to select the mode: - E: up to 6 km/h - D: up to 20 km/h - SPORT: up to 25 km/h
9. Cruise Control: maintaining speed. It is activated after maintaining the same speed for a few seconds.
10. Temperature: If on, stop the vehicle immediately as this indicates engine overheating.
11. Fault: If this option is enabled, check for a possible solution by consulting the fault code table.
12. **A** Power Button/Controls: Press and hold to power on/off the scooter.
13. turn the lights on/off: press button (A) once to turn them on. With the lights on, press button (A) again to turn them off.

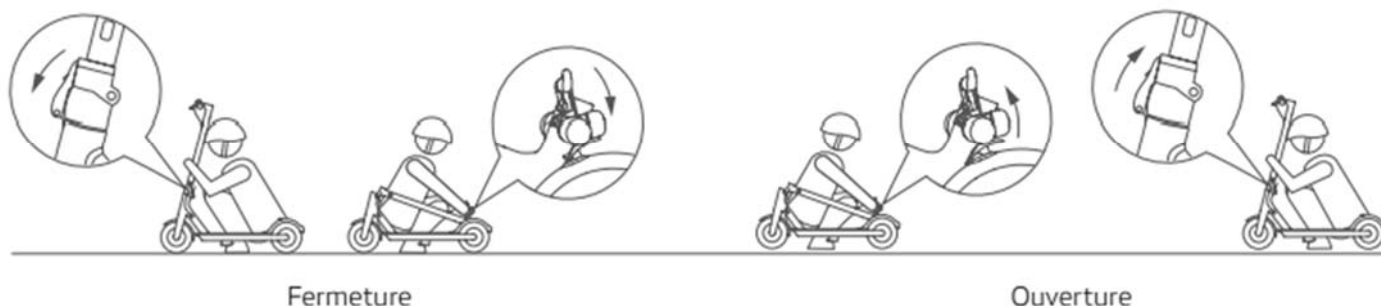

Closing: Switch off the electric scooter, unlock the folding mechanism: press the red hook and pull the lever outwards (see picture), bring the handlebar stem inwards and make sure it is well locked.

Opening: Unlock the handlebar stem from the fender: press the clip to release the handlebar, lift the handlebar stem as far as possible and lock it by pushing the lever inwards. Turn on the electric scooter



1. **load** ; Open the rubber cap of the charging socket located on the left side of the platform. 2. Plug the battery charger connector into the socket. 3. When the battery is full, remove the charger connector (the charger button turns green)

